

SNOW DEFENDER™

Patented


6500

Installation Instructions

The Snow Defender™ 6500 is for standing seam roofing only. It is designed to fit standing seam panels in seam width up to 3/8" and most 1" to 1-3/4" high. It is not designed for seams below 1". Using a 7/32" hex bit unscrew the set screws till they are flush on the inside wall. Place the guard on the seam of the roof. The snow guard blade needs to be towards the eave. With your hand, apply even pressure on the top of the 6500. Torque all set screws in an alternate fashion. Set screws are to be torqued at a maximum of 220 inch pounds.

Note: Most electric & cordless drills will not achieve 220 inch pounds. It is recommended to use a torque wrench.

Towards ridge

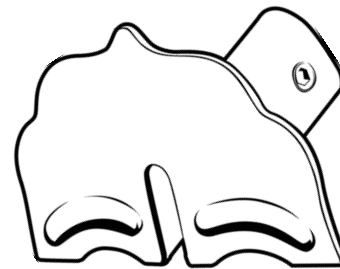


Face plate towards the eave.

Failure to install an adequate amount of snow guards and in the proper pattern will void the warranty.

- 12" Panels - 1st Purlin: every 24", 2nd Purlin: every other 24" = 1 guard every 12" staggered
- 16" Panels - 1st Purlin: every 32", 2nd Purlin: every other 32" = 1 guard every 16" staggered
- 20" Panels - 1st Purlin: every 40", 2nd Purlin: every other 40" = 1 guard every 20" staggered



For warranty details visit www.snow-defender.com

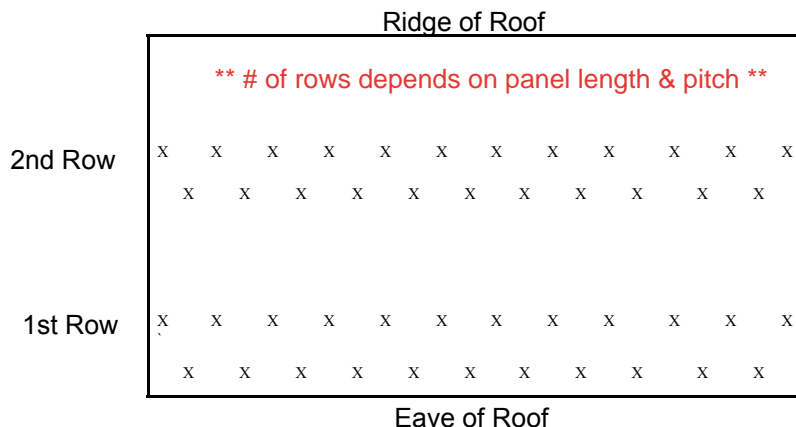

137 Newport Rd
Leola PA 17540
877-897-7020

Remember it is very important to install the guards properly with the correct quantities. Do not only put snow guards over doorways, walkways, etc.

www.levisbuildingcomponents.com